CP Automation
Keeping industry in motion

PR-20230412-55 (6 button 4-wire radio)
Register a transmitter in a receiver

1. Remove the front cover of the receiver. Use a screwdriver to remove the screws.
2. Power the receiver up.

   The Power LED lights (yellow).
3. Make sure that the **Stop** button is pressed on the transmitter.
4. Twist and release the **Stop** button.

   The top LED lights. LEDs 3 and 4 flash (red).
3. Press buttons 7 and 8 simultaneously for at least 1 second.

   LEDs 3 and 4 light (red).
4. Release buttons 7 and 8.

   LEDs 3 and 4 go out. The top LED flashes.

ON THE RECEIVER


5. Press the receiver **Function** button.
6. Press the receiver **Select** button.

ON THE TRANSMITTER

7. Press and hold buttons 1 and 2.
8. Release buttons 1 and 2.

   The transmitter is registered.

If no transmitter is found within approximately 10 seconds, the receiver exits to normal operation. Go back to step 1 and try again.

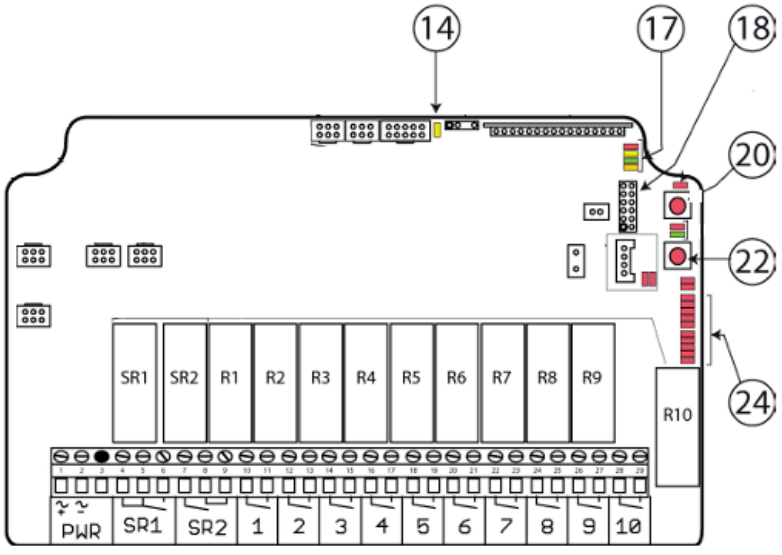

14. Power LED (yellow)
17. Function LEDs (1 = red, 2 = yellow, 3 = green, 4 = orange)
20. **Function** button (Cancel)
22. **Select** button (OK)
24. Relay LEDs 1–10 (red)

For further information please contact CP Automation on +44 (0)1234 349191 or by email at cranesandpt@cpaltd.net.